

# KT-4000

## Model Code Table

Brand	Model Code	Brand	Model Code
ALPIN	0252, 0253, 1788, 3325	LIANGYU	0233, 0451, 1257, 3523
AUCMA	0288-0296, 0462, 2337, 3534	LITTLE DUCK	0527, 0532, 1556, 2070
AUX	0297-0300, 0451, 0474, 0475, 2860, 3370	LOREN-SEBO	0255, 0471, 0472, 1496, 3543
BANSHEN	0264, 1288, 3848	MACQUAY	0234-0237, 0465, 2283, 3820
BOERKA	0383, 0434, 0436, 0437, 3967	MICOM	0415, 1439, 2463
CARRIER	0203-0209, 0456-0458, 0482-0486, 0563-0565	MIDEA	0260-0265, 0526, 1284, 2310
CHANGHONG	0301-0308, 1325, 2353, 3982	MITSUBISHI	0001-0045, 0476-0479, 0522, 0523, 0568, 0582, 3628
CHIGO	0379-0382, 0489, 0515, 1916, 2940	NORITZ	0431, 1455, 2468
CHOFU	0184-0187, 1721, 3771	PANASONIC	0138-0154, 0483, 0490-0492, 2019, 3738
CHUINLAN	0345-0350, 0450, 0453, 3932	National	0138-0154, 0483, 0490-0492, 2019, 3738
CORONA	0155-0163, 0459, 2206	PANDA	0378, 0890, 1405
CONROWA	0377, 1913, 3961	PHILCO	0210, 0211, 0487, 0488, 3795
CONSUL	0463, 0975, 2511	PROTON	0421-0423, 2507, 3593
DAEWOO	0203-0209, 0406, 2256, 3990	RAYBO	0362-0367, 1387, 2925
DAIKIN	0171-0183, 0566, 0577, 2220, 3758	ROWA	0369, 0438, 0439, 0494, 0527, 0531, 1975, 3510
DOCTOR	0221, 0449, 2497, 3850	Sabro	0435, 0506-0508, 2483, 3579
DONGBAO	0355-0361, 2403, 3430	SAIJO DENKI	0212-0215, 1238, 3285
DONGXINBAO	0413, 2461, 3997	SAMPO	0424-0426, 1448, 3497
Electrolux	0216-0220, 0569, 1753, 3802	SAMSUNG	0188-0196, 0516, 0518, 2239, 3772
FEDDERS	0498, 0499, 0528	SANYO	0046-0095, 0559, 0529, 0530, 1090, 3678
FRESTECH	0277, 0519, 0520, 1813, 3349	SASUKI	0254, 0470, 2006, 3838
FUJITSU	0127-0137, 0464, 0552-0554, 1158, 3720	SHANGLING	0384-0388, 0444, 0445, 3969
FUNAI	0430, 0481, 1966, 3502	SHARP	0096-0106, 0525, 1633, 2150, 2656
GALANZ	0371, 0372, 0521, 1395, 2933, 3956	SHINCO	0351-0354, 0454-0456, 2912
General	0639, 1152, 2180, 3711	SHUANGLU	0376, 0404-0407, 0480, 3476
GLEE	0398, 0399, 2446, 3983	SHUAIKANG	0288, 0800, 1311
GOLDSTAR	0201, 0466-0469, 2515	SONGGE	0428, 0429, 1965, 2988
GREE	0309-0316, 0482, 0512, 0513	SOVA	0409, 0410, 2457, 3482
HAIER	0266-0272, 0453-0455, 3852	SUMMER	0427, 1963, 2485, 3499
HISENSE	0332-0335, 0517, 1869, 2895, 3917	SUNDURG	0257, 0505, 1793, 3841
HITACHI	0118-0126, 1148, 2679, 3709	SWAN	0434, 0477, 0516, 0524, 0946, 1556
HUABAO	0336-0344, 1879, 3409, 3926	TADIRAN	0246-0251, 2295, 3833
HUAKE	0408, 1432, 2765, 3992	TATUNG	0419, 0420, 1955, 2979
HUAMEI	0402, 0460-0465, 1997, 3533	TCL	0273-0281, 0476, 0493, 0570, 1299, 3347
HUALING	0317-0325, 0452, 2500, 3906	TECO	0256, 0473-0475, 1280
HUIFENG	0370, 0882, 2420, 3954	TIANDI	0415, 0927, 1538, 3999
HUIKANG	0368, 0441-0443, 2416, 3514	TOSHIBA	0107-0117, 0479, 0561, 0562, 1647, 3181
HYUNDAI	0202, 0433, 0480, 1226, 2250	TRANE	0227-0232, 0739, 2276
JDC	0373, 0440, 1397, 3000	UNI-AIR	0222-0224, 0450, 3522
JINDA	0414, 1950, 2536	WEILI	0393-0396, 2442, 3979
JINSONG	0389-0391, 0446-0448, 3462	Whirlpool	0164-0170, 0502, 2038, 3752
JOHSON	0245, 0492, 2028, 3829	WINIA	0481, 0550, 1505, 3553
KANGLI	0374, 0375, 2935, 3958	XILENG	0411, 0412, 2460, 3995
KELON	0282-0287, 0473, 0485-0488	XINLE	0400, 0401, 2960, 3985
KLIMATAIR	0225, 0226, 0452, 1988, 3810	YANGZI(YAIR)	0403, 1427, 3475
KOLIN	0416-0418, 1952, 2465, 3539	YINYAN	0258, 0259, 0326-0331, 0478, 2888
KONKA	0397, 0457-0459, 2507, 3981	YORK	0107, 0238-0243, 0573, 2287, 3312
LG	0197-0200, 0514, 2050, 3730	Zhen bao	0639, 1164, 2176, 3200



6 974246 133041 9



RECYCLED PAPER

MADE IN CHINA  
NO.K-E-00109-V3

**QUNDA®**

# KT-4000



- ▶ 4000 codes in 1
- ▶ Beautiful housing
- ▶ Input codes by digit keys
- ▶ Full Function
- ▶ Permanent Memory



4000 in 1



## UNIVERSAL A/C REMOTE CONTROLLER

**QUNDA®**

### KT-4000 One-key universal A/C remote control user's Guide



#### Product Description

KT-4000 integrates more than 100 brands with 4000 models in one remote controller. You can press the numeric keys (0-9) for the required code directly. It has accurate clock, timer on/off, permanent memory, and a "Fast cool/heat" feature convenient for your use.

#### Brand Code Setting

1. Open the battery cover, put 2 AAA (UM-4, R03) batteries as indicated.
2. Find the brand code from the model code table.
3. Press "SELECT" key, the code on the LCD blinks. Enter the 4 digit code in. Code is confirmed.

Note: Try each brand model code one by one, until your remote can operate the air conditioner.

#### Auto-search

If the air conditioner brand is unknown or not listed in the code table, search your code as follows:

1. Aim remote control at your air conditioner, press "SELECT" key for 5 seconds and release. When the air conditioner sends a buzzer, press any key to confirm.
2. Try other functions keys in your remote. If it does not work, repeat the above steps.

#### Using "F. COOL" and "F. HEAT"

Press "Fast Cool" or "Fast Heat" key, air conditioner will be cooled or heated accordingly. Note: Temperature can also be adjusted by pressing the "+" and "-" keys accordingly.

#### One key nonstop function

Press "one key Power" key, it can open air conditioner, and also judge the room in summer or winter, and then set the cool or heat mode, set the temperature 26 or 20 degree, set fan middle and swing auto.

Note: Temperature can also be adjusted by pressing the "+" and "-" keys accordingly.

#### Clock set up

1. Press the "CLOCK" key, clock signal blinks.
2. Press the "+" and "-" of the "TIME" key to set the current time.
3. Press the "CLOCK" key again. (If not pressed, time is set automatically after 5 seconds)

#### Timer on/off

1. Press the "TIMER ON" or "TIMER OFF" key, the LCD displays the clock signal and time blinks.
2. Press "+" and "-" of the "TIME" key, adjust the time to make the air conditioner turn on/off automatically.
3. Time blinks (it will stop after 5 seconds). LCD displays current time and clock signal.

Note:

1. You only can set timer on after turning off the air conditioner, and set timer off after turning on the air conditioner
2. If you press "TIMER ON/OFF" twice continuously, time is deleted.
3. After setting timer, keep aiming momentarily your remote control at your air conditioner within distance. If not done, the setting is deleted.
4. To see the TIMER, press the "TIMER ON/OFF" key, LCD will display the time (after 5 seconds it will display the current time)

#### Room Temperature

Press "ROOM TEMP" key, LCD displays current room temperature as a thermometer.

#### Attention

1. If not used for a long time, remove the batteries to avoid damaging the machine due to battery liquid leakage. When the LCD looks dim, please replace batteries. Do not use new and old batteries together.
2. LCD only displays the time. If "ENTER" key is pressed once, you can find the code.
3. The manufacturer keeps the right to change the parameters and functions of the product.

#### Technical Parameters

Controllable distance: Greater than 8 meters  
Power supply voltage: DC 3V  
Battery model: Battery AAA (UM-4, R03)X2  
Dimension: L127mmXW48XD22mm  
Weight: Approx.66.5g (excl. the batteries)