

Brand	Model Code	Brand	Model Code
ALPIN	0252, 0253, 0764, 0765	LIANGYU	0233, 0451, 0963
AUCMA	0288-0296, 0462, 0801, 0974	LITTLE DUCK	0015-0020, 0527
AUX	0297-0300, 0451, 0474, 0475, 0809, 0963	LOREN-SEBO	0255, 0471, 0472, 0983
BANSHEN	0264, 0776	MACQUAY	0234-0237, 0465, 0977
BOERKA	0383, 0434, 0436, 0437, 0895	MICOM	0415, 0927
CARRIER	0203-0209, 0456-0458, 0482-0486, 0563-0565	MIDEA	0260-0265, 0526, 0772, 0776
CHANGHONG	0301-0308, 0813, 0817, 0819	MITSUBISHI	0001-0045, 0476-0479, 0522, 0523, 0568, 0582, 1028
CHIGAO	0379-0382, 0489, 0515, 0892	NORITZ	0431, 0943
CHOFU	0184-0187, 0699	PANASONIC National	0138-0154, 0483, 0490-0492, 0651, 0995
CHUNLAN	0345-0350, 0450, 0453, 0962	PANDA	0378, 0890
CORONA	0155-0163, 0459, 0670	PHILCO	0210, 0211, 0487, 0488, 1000
CONROWA	0377, 0889	PROTON	0421-0423, 0934
CONSUL	0463, 0975	RAYBO	0362-0367, 0876
DAEWOO	0203-0209, 0406, 0717, 0918	ROWA	0369, 0438, 0439, 0494, 0527, 0531, 0881
DAIKIN	0171-0183, 0566, 0577, 0683, 0695	Sabro	0435, 0506-0508, 1018
DOCTOR	0221, 0449, 0733, 0961	SAIJO DENKI	0212-0215, 0724
DONGBAO	0355-0361, 0867, 0870	SAMPO	0424-0426, 0938
DONGXINBAO	0413, 0925	SAMSUNG	0188-0196, 0516, 0518, 0700, 0707
Electrolux	0216-0220, 0569, 0729, 0732	SANYO	0046-0095, 0558, 0529, 0530, 0606
FEDDERS	0498, 0499, 0528	SASUKI	0254, 0470, 0982
FRESTECH	0277, 0519, 0520, 0789	SHANGLING	0384-0388, 0444, 0445, 0956
FUJITSU	0127-0137, 0464, 0552-0554, 0641, 0976	SHANXING	0392, 0449, 0961
FUNAI	0430, 0481, 0942, 0993	SHARP	0096-0106, 0525, 0608, 0616
GALANZ	0371, 0372, 0521, 0883	SHENGFENG	0376, 0480, 0992
GUQIAO	0244, 0291, 0803	SHINCO	0351-0354, 0454-0456, 0866
GLEE	0398, 0399, 0900	SHUANGLU	0376, 0404-0407, 0480, 0992
GOLDSTAR	0201, 0466-0469, 0713, 0980	SHUAIKANG	0288, 0800
GREE	0309-0316, 0482, 0512, 0513	SONGGE	0428, 0429, 0941
HAIER	0266-0272, 0453-0455, 0966	SOVA	0409, 0410, 0921
HISENSE	0332-0335, 0517, 0844	SUMMER	0427, 0939
HITACHI	0118-0126, 0630, 0637	SUNDURG	0257, 0505, 1017
HUABAO	0336-0344, 0850	SWAN	0434, 0477, 0516, 0524, 0946
HUAKE	0408, 0920	TADIRAN	0246-0251, 0758, 0762
HUAMEI	0402, 0460-0465, 0972	TATUNG	0419, 0420, 0932
HUALING	0317-0325, 0452, 0831	TECO	0256, 0473-0475, 0768, 0987
HUIFENG	0370, 0882	TIANDI	0415, 0927
HUIKANG	0368, 0441-0443, 0953	TOSHIBA	0107-0117, 0479, 0561, 0562, 0489, 0629, 1001
HYUNDAI	0202, 0433, 0480, 0714	TRANE	0227-0232, 0739, 0744
JDC	0373, 0440, 0952	UNI-AIR	0222-0224, 0450, 0735, 0962
JIANGNAN	0432, 0944	WEILI	0393-0396, 0908
JINDA	0414, 0926	Whirlpool	0164-0170, 0502, 0681, 1014
JINSONG	0389-0391, 0446-0448, 0959	WINIA	0481, 0550, 0993
JOHNSON	0245, 0492, 0757	XILENG	0411, 0412, 0923
KANGLI	0374, 0375, 0887	XINLE	0400, 0401, 0913
KELON	0282-0287, 0473, 0485-0488	YANGZI(YAIR)	0403, 0915
KLIMATAIR	0225, 0226, 0452, 0738	YINYAN	0258, 0259, 0326-0331, 0478, 0838
KOLIN	0416-0418, 0929	YORK	0107, 0238-0243, 0573, 0751
KONKA	0397, 0457-0459, 0909		
LG	0197-0200, 0514, 1026		



MADE IN CHINA
NO.K-E-00089-V3



Unique function of
"intelligent cool"
"intelligent heat"

Clock display

Timer on and off

Room temperature
display

Code memory



Product Description


KT-N808 has a new unique function of "intelligent cool" and "intelligent heat". You will enjoy the comfortable temperature by pressing one key. It also has clock accurate, timer on and off, code permanent memory and so on. So it is your best choice.

Please read this manual carefully before using, which will be a great help for you to use the remote control.

The remote control can be used after setting. Pull side cover of remote control down, put 2 AAA (VM-4, R03) batteries as per polar indicated on battery cabin.

Manually Code Setting


1. Find out codes from brand code table. There are many groups codes of each brand. Please try the first group, if it does not operate your equipment, try the second, and do like this until the codes can operate your equipment.
2. Press the SLECTE key, the code on LCD will flash. Press "Time +" or "Time -" key until the required code appears. And then press "ENTER"(OK) key. Now setting is complete, you can control your air conditioner.
3. Try other function keys, if they do not work, please choose the next group of code until all functions can work.

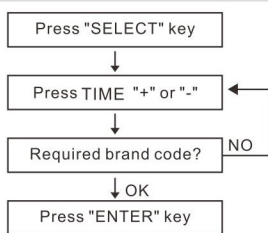

Auto-search code setting

If you do not know the brand of your air conditioner, or if your brand is not listed in the code table, please operate as per following steps:

1. Put the remote control aim at your air conditioner, press the "SELECT" key for 5 seconds and then release, remote control is entering the auto-search status, emit the signal continuously, the code flashes and increases. While the air conditioner receives the signal, and send one buzzer. Press any key to confirm.
2. Try other function keys, if they do not work, repeat above steps until it is correct.

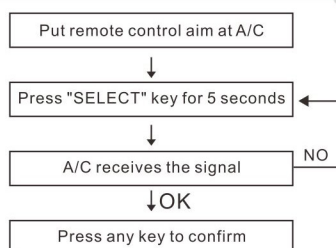

Using of "intelligent cool" "intelligent heat"

In the summer, press the "intelligent cool" only, the air conditioner will be cooled immediately. In the winter, press the "intelligent heat" key only, the air conditioner will be heated immediately. In both status, the air conditioner will let the heating and cooling in a comfortable temperature automatically, and the fan and swing are all automatic. At the same time, it also can adjust the temperature by "Temp.+" "Temp.-" keys as your requires. These two intelligent keys are very good for the children and the old.

Clock set up

1. Press the "clock" key, clock signal flashes.
2. Press "Time +" "Time -" key, adjust to the current time.
3. Press the "clock" key again, clock signal stop flashing, the clock setting finishes. (If you do not press the "clock" key, it also finishes automatically after 15 seconds)

Timer on

You could set timer on, only after turning off your air conditioner.

1. Press the "TMR on" key, the LCD displays the clock signal and the time flashes.
2. Press "TIME" "+" "-" key, adjust the time when you want to make the air conditioner turn on automatically.
3. Time flashing and it will stop after 15 seconds. The LCD displays current time and clock signal. Now setting is complete.

Timer off

You could set timer off, only after turning on your air conditioner.

1. Press the "TMR off" key, the LCD displays the clock signal and time blinking.
2. Press the "TIME" "+" "-" key; adjust the time when you want to make the air conditioner turn off automatically.
3. Time flashing and it will stop after 15 seconds. The LCD displays current time and clock signal. Now setting is complete.

NOTE

1. If press the "TIMER ON" or "TIMER OFF" key twice, timer is cancel.
2. After timer setting is finished, you should make the remote control's emit directs to your air conditioner's receiving location in available distance. If not, it can not work.
3. If you want to watch the time of timer, you should press the "TIMER ON" or "TIMER OFF" key, the LCD will display the time of timer and after 5 seconds it will display current time.

Room temperature display

Press "Room T" key, it shows current room temperature and it will disappear after 5 seconds.

Attention

1. If it is not used for a long time, remove the battery to avoid leakage liquid of the battery to damage the machine. When the LCD looks dim, please change batteries. (New and old batteries can not be used together) After the batteries are replaced every time, it is not necessary to set model code again.
2. As usual the LCD only display the time when pressing model codes "Enter" key, you can find the code and it is showed on LCD. After 5 seconds it returns time.
3. Check carefully that there is no remora between remote controller and Air conditioner when the time on/off doesn't work. Because the operation is effective only when the air conditioner receives the timer on/off signal from remote controller.
4. The manufacturer keeps the right to change the parameter and function of product.

Technical Parameters

Controllable distance : Large than 8 meters
Power supply voltage: DC 3 V
Battery Model: Battery AAA(UM-4, R03)X2
Dimension: L165mm X W55mm X D25mm
Weight: Approx100g(excl.the batteries)