

Note:	When compressor shut off, it needs 3 minutes to restart.
Mode selection:	Select working mode: economic operation if room temperature low than 21℃, into heating mode if higher than 21℃, into cooling mode. Setting temperature is 24℃.
Fan speed selection:	Select fan speed, it will be automatic when in dry. In auto fan mode, the fan speed will be quick if the difference between setting temperature and room temperature higher than 4℃ and will be slow if the difference less than 2℃.
Temperature setting:	The able to set from 16℃-30℃. It will not response a mode of mode.
Timer selection:	Timing shutdown, timing start up and no timing.
Timer setting:	It can be between 1-16 hours.
Swing:	Swing on or off.
Sleep:	Will shutdown after 8 hours.
Effective in economic mode:	Effective in economic mode. Be able to adjust the setting temperature.
Too warm/Too cool:	Control on or off after press it.
ON/OFF:	Control on or off.

1: MODE DISPLAY
AUTO ON Mode: Temperature directories displays **R**
COOL MODE Cool indicator light on, temperature directories display setting temperature and room temperature, when setting it displays setting temperature that by remote, and then displays room temperature.
DRY MODE Temperature directories displays **D**
FAN MODE Temperature directories displays **F**
HEAT MODE Heat indicator light on, temperature directories display setting temperature and room temperature, when setting it displays setting temperature that by remote, and then displays room temperature. When defrosting, temperature directories displays **Df**
SHUT DOWN All indicators off.
Sleep: When the display mode the luminance will be dark, make people have a good rest, sleep. Temperature directories display automatically and shut down after 8 hours.
TIMER ON: When temperature directories displays **ON** and flashes, it means air-conditioner is in timer-on.
TIMER OFF: When temperature directories displays the current mode, it means air-conditioner is in OFF-MODE.

2. REMARKS
IR RECEIVER: To receive the instruction from the remote.
Emergency button: Without remote press this button can start air-conditioner. Press it, it will cool mode setting temperature will be 26°C, fan speed and direction automatically. Press again, it will in heat mode, setting temperature is 20°C, fan speed and direction automatically, press again off the air-conditioner. Circulating operation.

3. Compressor instruction
In heat or cool mode, when indicator light of heat and cool flash it means air-conditioner get to the setting temperature, or compressor is 3 minutes protection stop. When compressor stop, the indicator light will turn off, it means compressor start.

Failure indication
When the room temperature sensor has a fault, temperature directories displays "E" and please check whether the sensor connected or not.
When the pipe temperature sensor has a fault, temperature directories displays "E" and please check whether the sensor connected or not.




QD-U08C(N) UNIVERSAL A/C CONTROL SYSTEM



Auto restart function

- Auto restart function
- Digital temperature display
- Outdoor fan controlled independently



 Please install by certificated technician.
Please test the system before installation.
Please avoid strong light before IR receiver