

QD68AI AI&WIFI A/C UNIVERSAL CONTROL SYSTEM

1. Preface

Dear users:
Thanks for choosing our latest new product QD68AI AI&WIFI A/C universal control system. It perfectly combines smart voice identification, voice broadcast, wifi remote control and IR remote control. It is our best wish to bring your life more convenience. Please read the manual carefully before using it. which will assist you getting the most from this control system.

2. Product Function Overview


2.1 Application scope

Suitable for cabinet air conditioner, split unit, ceiling & floor unit and ceiling cassette. For the control of complicated refrigeration system. For the control of refrigeration house and the greenhouse.

2.2 Features

- ▶ Off-line voice control.
- ▶ Quick voice answer.
- ▶ Wifi router connection.
- ▶ Smart life APP to remote control.
- ▶ Strong switch power, AC100-240V 50/60HZ.
- ▶ Universal for both PG and TAP motor.
- ▶ Outdoor fan is controlled independently.
- ▶ Prevent cold wind on heating mode.
- ▶ Pipe over temperature protection.
- ▶ Failure diagnosis.
- ▶ Timer on/off, sleep function.
- ▶ Optional starting capacitor.
- ▶ Quick PG plug.
- ▶ Auxiliary heating function.
- ▶ Optional memory function.

3. Diagram and description

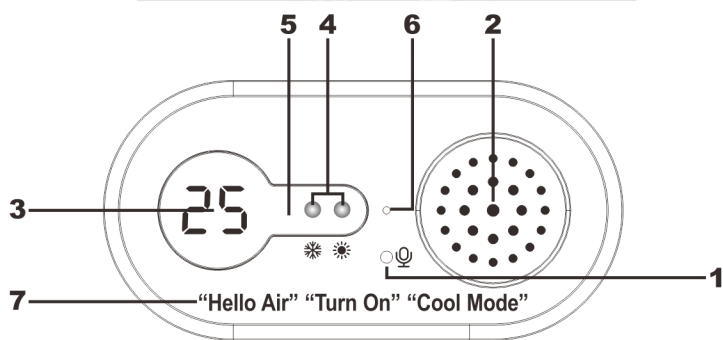

	Description
1	MIC: to receive the voice command.
2	Loudspeaker: to answer the command.
3	<p>Power off: All the lights are off.</p> <p>Auto mode: Temperature area indicates AU</p> <p>Cool mode: Temperature area indicates setting and room temperature. When using remote control to set the air conditioner, it will indicate the setting temperature for 5 seconds, then changed to room temperature.</p> <p>Dry mode: Temperature area indicates dF</p> <p>Fan mode: Temperature area indicates F</p> <p>Heat mode: Temperature area indicates setting and room temperature. When using remote control to set the air conditioner, it will indicate the setting temperature for 5 seconds, then changed to room temperature. When defrosting, temperature area indicates dF, to point that the air conditioner is defrosting.</p> <p>Sleep mode: When the air conditioner is set on sleep mode, the display luminance will be turned down to help user sleep well, the setting temperature will be adjusted automatically, until turned off after 8 hours.</p> <p>Timer on: "ON" is indicated, it points that air conditioner set as timer on.</p> <p>Timer off: Temperature area displays the current mode or temperature, and it flashes. it means air-conditioner in OFF-MODE.</p>
4	<p>Cool mode: green light on.</p> <p>Heat mode: red light on.</p>
5	IR: To receive the orders from Midea & Gree remote control, also the orders from our equipped remote control.
6	<p>Emergency key: Without the remote control, press the key to start the air conditioner. The air conditioner works under cooling mode, setting temperature 26 °C, fan speed auto. Press again, the air conditioner works under heating mode, setting temperature 20 °C, fan speed auto. Press again to turn off the unit. All are the loop operations.</p> <p>Auto restart function: You can choose to use auto restart function or not based on your own environment.</p> <ul style="list-style-type: none"> • Step 1: When the system is off, press and hold the emergency key for 5 seconds and temperature area indicates P symbol. • Step2: Repress the emergency key to choose using auto restart function or not. At the meantime temperature area will indicates OFF or ON. OFF: means auto restart function is unused (the default setting is OFF) ON: means auto restart function is used. • Step3: No need to confirm the setting, the system will save and return the off state after 10 seconds.
7	Three sentences of the voice commands


QD68AI AI&WIFI A/C UNIVERSAL CONTROL SYSTEM

4. Voice control steps

4.1 All the voice commands for the voice control

Function	voice commands
wake up A/C	hello air
power	turn on,turn off
mode	auto mode, cool mode, heat mode, dry mode,fan mode
fan	auto fan speed, low fan speed, medium fan speed, high fan speed
set temperature	sixteen centigrade to thirty centigrade, temperature up, temperature down
swing	swing up,swing down
sleep	sleep on,sleep off
timer set	one hour off to eight hours off,candle the timer

4.2 Example for the voice control

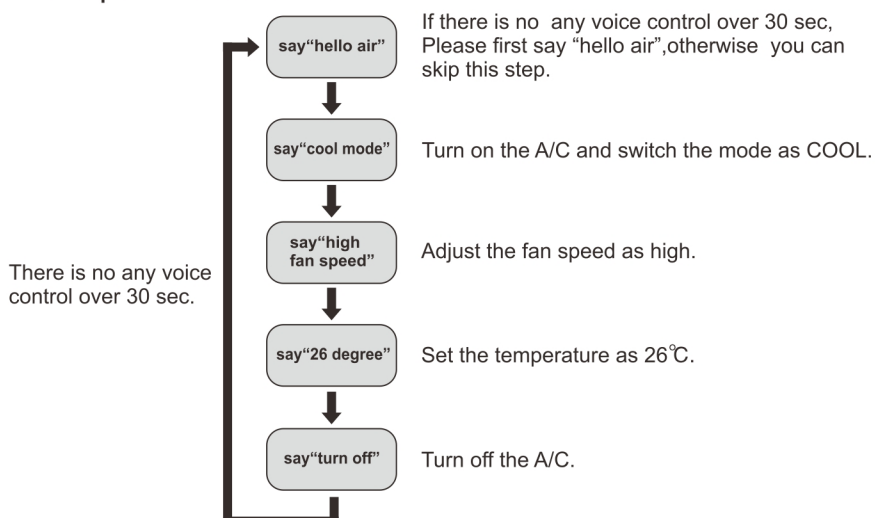


★ If there is no any voice command over 30 sec, please say "Hello Air" again to wake up the air conditioner first, then to send the new voice command.

5. Wifi control steps

About the detail steps of WiFi remote controlling A/C, please refer to the manual of QD01WF.

6. Remote control function

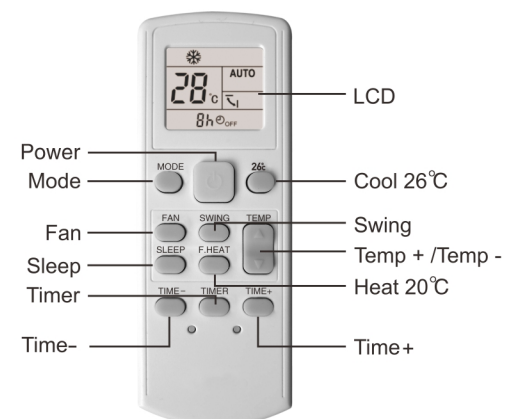

★ QD68AI system can be able to receive the orders from Midea & Gree remote control, also the orders from our equipped remote control.

7. Parts List

Packing box	1
PCB board	1
Display panel	1
QD01WF module	1
Remote control	1
Sensor	2
Connctor	1
Manual	2
Indoor fan cable	1
Start capacitor, 1.2uf	1